

To Install the ENCAD driver in Windows 95, Windows 98 and Windows ME :
If the Add New Hardware Wizard appears on boot up of your computer, click CANCEL

Uninstall any ENCAD drivers that you have currently installed in your Printers folder.

Delete any folders under C:\ENCAD\Drivers. They will be recreated when the downloaded file is expanded.

Save the driver file to your Desktop

Double Click on ENCAD_DRV_VER_6110.EXE to expand the driver files to C:\ENCAD\Drivers\Version 6110.

Go into the PRINTERS folder of your Operating System, which can be found by going to START, SETTINGS, and PRINTERS.

Specify a Local or Network connection.

At the list of Manufacturers and Models, Choose HAVE DISK.

Choose BROWSE and direct the Wizard to the folder C:\ENCAD\Drivers\Version 6110.

Click OK twice to bring up the revised list of Manufacturers and Models.

Choose your ENCAD printer from the list.

Specify which port to which the ENCAD printer is connected.

Continue the install as you would any printer.

Do not Print a Test Page at this time.

Go into your Printers folder and right click on the new printer icon; left click on Properties.

Click on the Document and Settings tab and click on the About This Printer button.

Verify that the file ENCW9X.DRV has the version number 6.1.10 next to it.

Click the OK button and then click on the General tab.

Click on the PrintTest Page button.